



temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212



Master water mixing valve shall be of the thermostatic type with liquid-filled thermal motor. It shall have lead free brass body construction with replaceable corrosion-resistant components. Valve construction shall employ a sliding piston control mechanism. Sliding piston and liner shall be of stainless steel material. Valve shall come equipped with union end stop and check inlets with removable stainless steel strainers. Valve shall control temperature from a low flow of 5 GPM* up to a maximum flow rate for a given pressure differential. Valve shall provide protection against hot or cold supply line failure and thermostat failure.

Unit includes a dial thermometer and shut-off valve on tempered water outlet. Unit is assembled and tested with necessary fittings and nipples. Cabinet is shipped separately.


FINISH:	Brass Rough C Other		
TEMP. RANGE 70° to 100°F 90° to 120°F 110° to 140°F Special		SET POINT 80°F 110°F 120°F	
Optional Including			
shut-off ar			

Model 805® Thermostatic Water Controller High-Low Water Mixer Eng. No. 86106

CAPACITIES - MODEL 805

Pressure Drop PSI	5	10	20	30	45	60	80
Valve Number	Capacity						
805-GPM	64	96	133	165	200	230	265
805-LPM	242	363	503	624	757	870	1003

1/2 gpm when properly installed in recirculated system.

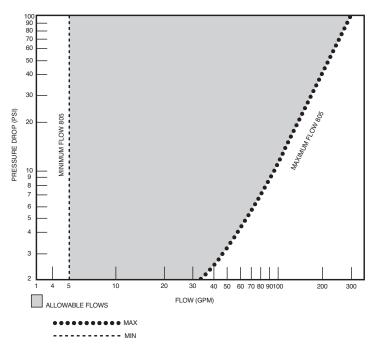

Valve must be field set prior to being put into service. Refer to O&M section titled "Setting the Mixing Valve to the System".

CABINET SPECIFICATIONS:

Body: 18 Ga. 16 Ga.
Door: 18 Ga. 16 Ga.
Material: Type 304 with No. 4 Finish

CARBON STEEL

16 Ga.
Baked enamel painted

TYPE OF CABINET MATERIAL

Recessed Stainless Semi-Recessed Carbon Steel Carbon Steel Surface Carbon Steel Box, Stainless Door


Cabinet includes lock with two keys. Hinged left side, piano type. For specifications on security cabinets, contact factory.







5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212

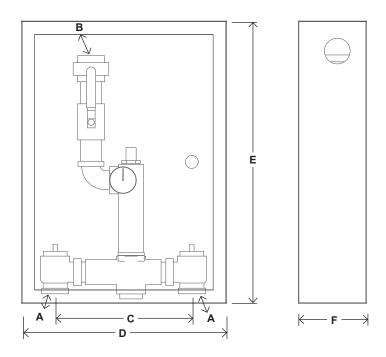

DIMENSIONS

Valve Number	Α	N.P.T.	В	N.P.T.	С	D	Е	F
805		2"		2"	17"	24"	33"	8"

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

Model 805[®] Eng. No. 86106

Typical Installation

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.

If a dual temperature system is used, a separate recirculating loop and pump are required to return high temperature hot water to the water heater. See Figure 2.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

Figure 1

When used in a single temperature recirculating system

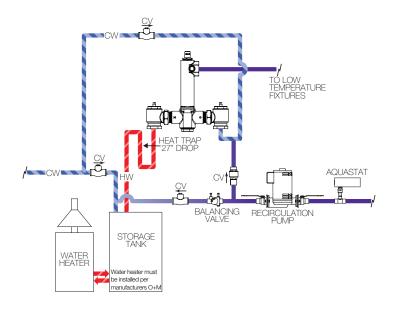


Figure 2

When used in a dual temperature recirculating system

