



temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208



Series 67 Combination Thermostatic and Pressure Balanced Water Controller Eng. No. 84508

Exposed valve shall be a combination thermostatic and pressure-balanced mixing valve, with a liquid-filled motor. In the event of interruption of hot or cold water supply or thermostat failure, the valve shall be designed to restrict flow by use of a sliding piston control mechanism with a reverse seat closure. The valve shall maintain output temperature for changes in inlet pressure and temperature. Valve construction shall have lead free brass body and stainless steel piston and liner. Mixing valve shall include a union end stop and check valve with removable strainer on each inlet.

Unit is completely assembled as shown. Includes dial thermometer and shut-off on tempered water outlet.

CAPACITIES - GPM SERIES 67

Pressure Drop PSI	5	10	20	30	45	60	80
Valve Number	Capacity – GPM						
67-10	2.5	3.5	5.5	8	10	12	14
67-25	6	10	14	18	25	30	34

^{1/4} gpm when properly installed in recirculated system.

CAPACITIES - LPM SERIES 67

Pressure Drop PSI	5	10	20	30	45	60	80
Valve Number	Capacity – LPM						
67-10	9.4	13.2	22.8	30.3	37.8	45.4	53
67-25	22.7	37.8	53	68	94.6	113	128


Minimum flow for 67-10 is 1/2 Gallon Per Minute Minimum flow for 67-25 is 1 Gallon Per Minute

FINISH:	rome	[
VALVE:	1/2" 3/4"		[
TEMP. RAN 50° to 100 85° to 135 100° to 150	°F °F	SET POINT 80°F 110°F 130°F	[[[





5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

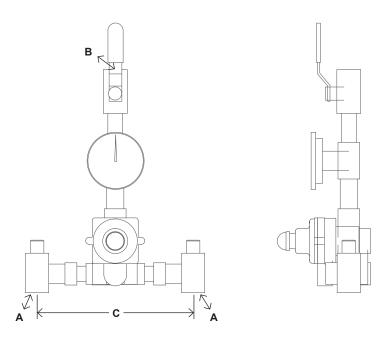

DIMENSIONS

Valve Number	A N.P.T.	B N.P.T.	С	
67-10	1/2"	1/2"	8"	
67-25	3/4"	3/4"	8-3/8"	

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

Series 67 Eng. No. 84508

Typical Installation

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

Figure 1

