




temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

Model 804 Thermostatic Water Controller High-Low Water Mixer Eng. No. 86308

CAPACITIES - MODEL 804 Pressure Drop PSI 20 30 45 60 80 Valve Number Capacity 804-GPM 72 100 124 150 174 193 804-LPM 197 273 379 469 568 659 731

1/2 gpm when properly installed in recirculated system.

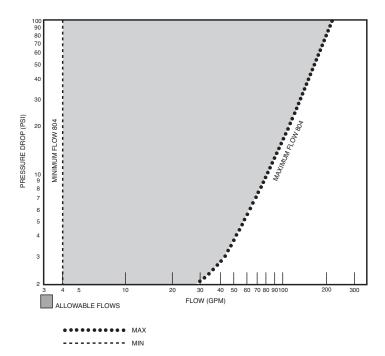



Master water mixing valve shall be of the thermostatic type with liquid-filled thermal motor. It shall have lead free brass body construction with replaceable corrosion-resistant components. Valve construction shall employ a sliding piston control mechanism. Sliding piston and liner shall be of stainless steel material. Valve shall come equipped with union end stop and check inlets with removable stainless steel strainers. Valve shall control temperature from a low flow of 4 GPM* up to a maximum flow rate for a given pressure differential. Valve shall provide protection against hot or cold supply line failure and thermostat failure.


Unit includes a dial thermometer and shut-off valve on tempered water outlet. Unit is assembled and tested with necessary fittings and nipples.

FINISH:	Brass Rough Chro Other	ome		
TEMP. RAN 70° to 100 90° to 120 110° to 140 Special	°F °F	SET POINT 80°F 110°F 130°F		
Optional Test Connection Including garden hose connection, shut-off and thermometer. Brass Rough Chrome				





5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

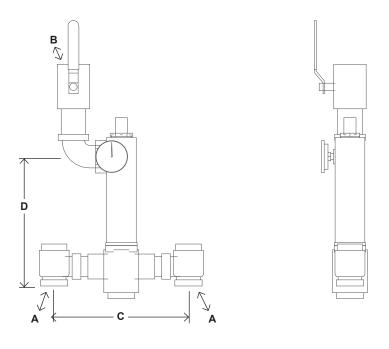

DIMENSIONS

Valve Number	A N.P.T.	B N.P.T.	С	D
804	1-1/2"	2"	15"	13-1/2"

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

Model 804 Eng. No. 86308

Typical Installation

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.

If a dual temperature system is used, a separate recirculating loop and pump are required to return high temperature hot water to the water heater. See Figure 2.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

Figure 1

When used in a single temperature recirculating system

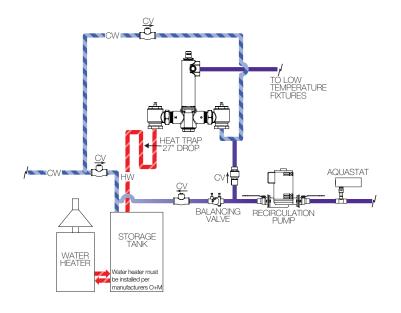


Figure 2

When used in a dual temperature recirculating system

