

Model 803 Parallel Manifold Recirculation System on Mounting Strut Eng. No. 86637

CAPACITIES – SERIES 800

Pressure Drop PSI	5	10	20	30	45
Valve Number	Capacity (2)				
803-GPM	43	60	85	103	125
803-LPM	163	227	322	390	473

Minimum flow: 1/2 GPM when properly installed.

Master water mixing valves shall be of the thermostatic type with liquid-filled thermal motor. They shall have bronze body construction with replaceable corrosion-resistant components. Valve construction shall employ a sliding piston control mechanism. Sliding piston and liner shall be of stainless steel material. Valves shall come equipped with union end stop and check inlets with removable stainless steel strainers. Valves shall provide protection against hot or cold supply line failure and thermostat failure.

Mixing valves shall be incorporated into a pre-piped manifold system which includes a recirculating pump, circuit setting balancing valve, thermometers, ball valves and mounting strut.

Unit supplied as packaged piped assembly.

FINISH: Brass
Rough Chrome
Other


TEMP. RANGE **SET POINT**

70° to 100°F 80°F
90° to 120°F 110°F
110° to 140°F 130°F
Special _____

Aquastat _____

Recirculation pump _____

Test connection and circulator power switch (optional)

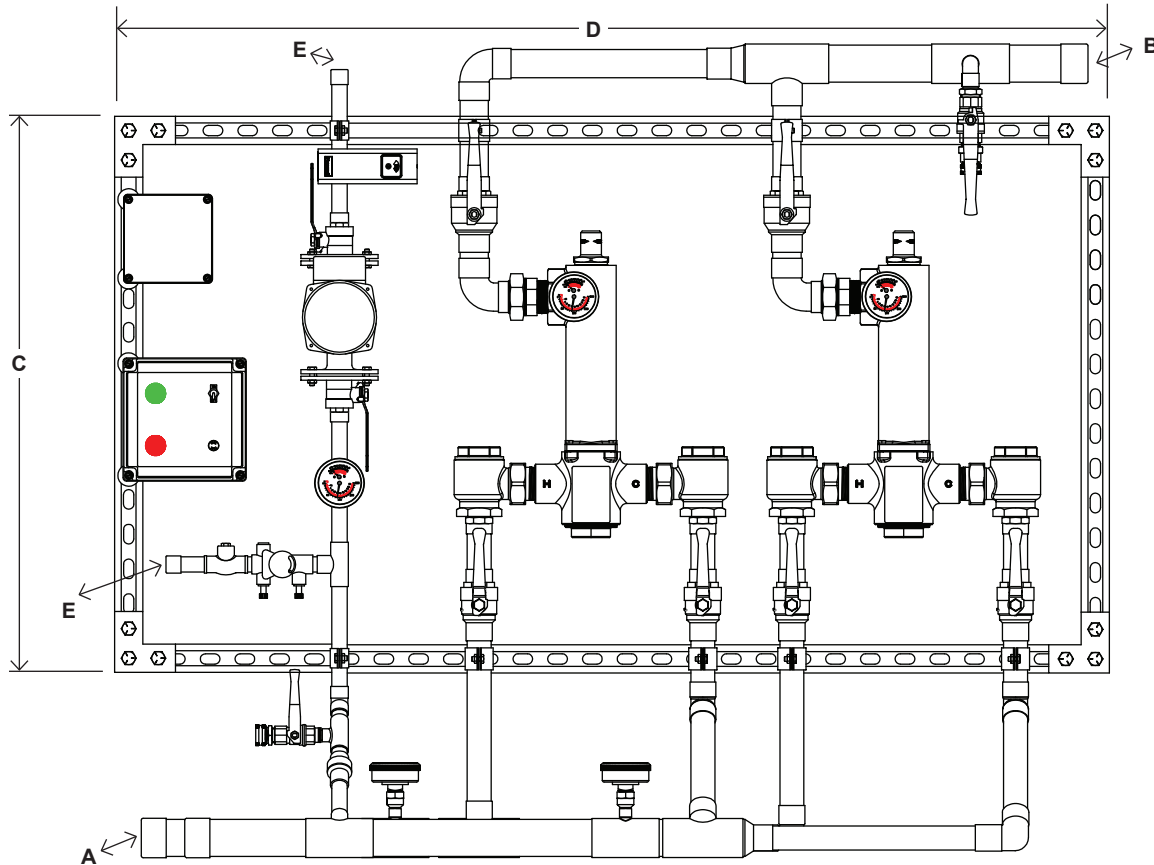

DIMENSIONS

Valve Number	A	B	C	D	E
803	2" SWT	2-1/2" SWT	34"	60"	Specified by engineer

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

All connections are sweat connections.

**Model 803
Eng. No. 86637**

Setting The Mixing Valve To The System

1. After installations be sure to flush the system thoroughly.
2. Make sure the hot water supply is heated to normal design temperature.
3. Close and tag all fixtures to ensure they are not used during this procedure.
4. Turn off the recirculating pump.
5. Create a draw on the system greater than the minimum flow rating of the mixing valve. All open fixtures must be tagged to ensure they are not tampered with or used during this procedure.
6. Allow water to flow through the mixing valve until the water temperature is stable. If necessary, readjust the mixing valve in accordance with the TEMPERATURE ADJUSTMENT section of the installation manual.
7. Once the temperature is set, start the recirculating pump and allow the system to reach set temperature.
8. Measure the water temperature at the return pump and adjust the aquastat to shut off the pump should the return water exceed the set point by 2 degrees F. Set the low limit switch to restart the return pump when return water drops 5 degrees F below the set temperature.
9. Set the balancing valve in the full open position.
10. Shut off all fixtures and ensure there is no draw on the system. The cold inlet to the mixing valve should be warm.
11. Allow the system to run in this condition for at least 30 minutes.
12. In some cases, an increase in water temperature may occur during a no draw period. If this occurs, slowly close the balancing valve until the water temperature is back to the original set temperature.