



### temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

Master water mixing valve shall be of the thermostatic type with liquid-filled thermal motor. It shall have lead free brass body construction with replaceable corrosion-resistant components. Valve construction shall employ a sliding piston control mechanism. Sliding piston and liner shall be of stainless steel material. Valve shall come equipped with union end stop and check inlets with removable stainless steel strainers. Valve shall control temperature from a low flow of 4 GPM\* up to a maximum flow rate for a given pressure differential. Valve shall provide protection against hot or cold supply line failure and thermostat failure.

Unit includes a dial thermometer and shut-off valve on tempered water outlet. Unit is assembled and tested with necessary fittings and nipples. Cabinet is shipped separately.


FINISH:	Brass Rough ( Other	Chrome		
TEMP. RANGE 70° to 100°F 90° to 120°F 110° to 140°F Special		<b>SET POINT</b> 80°F 110°F 130°F		
Optional Test Connection Including garden hose connection, shut-off and thermometer.				
Shat-on an				

# Model 804 Thermostatic Water Controller High-Low Water Mixer Eng. No. 86306

### CAPACITIES - MODEL 804

Pressure Drop PSI	5	10	20	30	45	60	80	
Valve Number	Capacity							
804-GPM	52	72	100	124	150	174	193	
804-LPM	197	273	379	469	568	659	731	

1/2 gpm when properly installed in recirculated system.

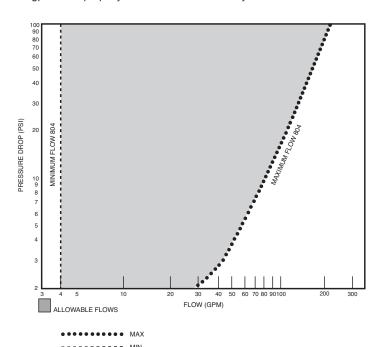

### **CABINET SPECIFICATIONS:**

Body: 18 Ga. 16 Ga.
Door: 18 Ga. 16 Ga.

Material: Type 304 with Baked enamel painted

No. 4 Finish

# **TYPE OF CABINET**Recessed Stainless


Cabinet includes lock with two keys. Hinged left side, piano type. For specifications on security cabinets, contact factory.







5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

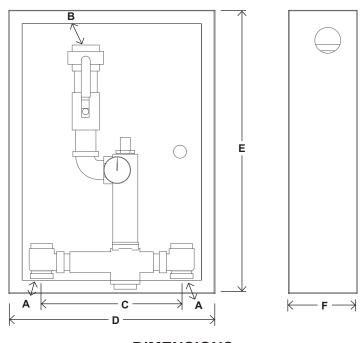

# DIMENSIONS Valve Number A N.P.T. B N.P.T. C D E F 804 1-1/2" 2" 17" 24" 33" 8"

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

# Model 804 Eng. No. 86306

## **Typical Installation**

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.


If a dual temperature system is used, a separate recirculating loop and pump are required to return high temperature hot water to the water heater. See Figure 2.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

# Figure 1

# When used in a single temperature recirculating system

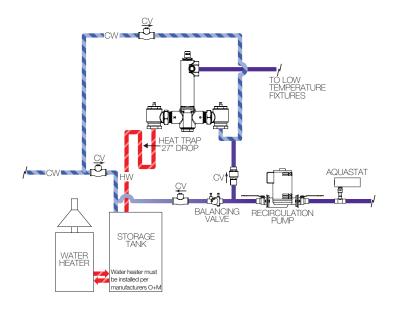

### Figure 2

# When used in a dual temperature recirculating system

