



5330 East 2501 St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208




The master controller shall be of the thermostatic type with liquid-filled motor. The controller shall maintain the set point temperature during periods of fluctuating inlet pressures and temperatures. Valve construction will include a lead free brass body and replaceable corrosion-resistant components. The piston and liner are stainless steel. The mixing valve shall employ an adjustable setpoint range and high temperature limit stop. Each unit will be equipped with stop and check valves for each inlet and includes a dial thermometer.

For higher capacity needs, the 310 is available with a $1/2^{\circ}$ NPT inlet and $3/4^{\circ}$ NPT outlet.

Model 310-SC1	
Thermostatic M	ixing Valve
Eng. No. 73046	(1/2")
Eng. No. 73049	(3/4")

CAPACITIES – MODEL 310							
Pressure Drop PSI	5	10	20	30	45		
Valve Number	Capacity						
310-1/2" GPM	1.5	2.5	3.5	5.5	7		
310-1/2" LPM	5.7	9.5	13.3	20.8	26.5		
310-3/4" GPM	3.5	5.5	8	10	12		
310-3/4" LPM	13.3	20.8	30	38	45		



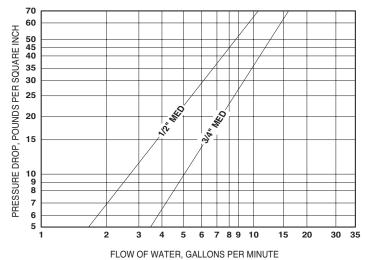

FINISH:	Brass Rough Chr Other	ome	
OUTLET:	1/2" NPT 3/4" NPT		
TEMP. RA 50° to 100 85° to 139 100° to 150 Special)°F 5°F	SET POINT 80°F 110°F 130°F	


ASSE 1070 Approved ASSE Lead Free Certified

Design and specifications subject to change without notice. Please refer to **temperedwater.com** to ensure most current data sheet and other design solutions.



SUBMITTAL DATA SHEET

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

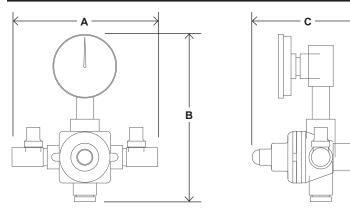

DIMENSIONS

Valve Number	Α	В	С	
310	7"	8"	5"	

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

Inlets are 1/2" NPT, outlet may be 1/2" or 3/4" NPT.

Model 310-SC1 Eng. No. 73046 (1/2") Eng. No. 73049 (3/4")

Typical Installation

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

Figure 1

