



temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208




The master controller shall be of the thermostatic type with liquid-filled motor. The controller shall maintain the set point temperature during periods of fluctuating inlet pressures and temperatures. Valve construction will include a lead free brass body and replaceable corrosion-resistant components. The piston and liner are stainless steel. The mixing valve shall employ an adjustable setpoint range and high temperature limit stop. Each unit will be equipped with stop and check valves for each inlet and includes a dial thermometer. Cabinet is shipped separately.

Model 310-CAB Thermostatic Mixing Valve Eng. No. 86401

CAPACITIES - MODEL 310

Pressure Drop PSI	5	10	20	30	45
Valve Number	Capacity				
310-1/2" GPM	1.5	2.5	3.5	5.5	7
310-1/2" LPM	5.7	9.5	13.3	20.8	26.5
310-3/4" GPM	3.5	5.5	8	10	12
310-3/4" LPM	13.3	20.8	30	38	45

FLOW CAPACITIES SINGLE STAGE - SERIES 310

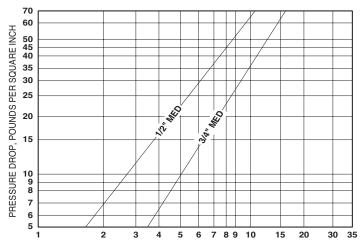

FLOW OF WATER, GALLONS PER MINUTE

Rough Chrome Other			
OUTLET:	1/2" NPT 3/4" NPT		
TEMP. RAN 50° to 100 85° to 135)°F 5°F	SET POINT 80°F 110°F 130°F	
Special			

CABINET SPECIFICATIONS:

STAINLESS CARBON STEEL

Body: 18 Ga. 16 Ga. Door: 18 Ga. 16 Ga.

Material: Type 304 with Baked enamel painted

No. 4 Finish

TYPE OF CABINET MATERIAL

Recessed ☐ Stainless ☐ Carbon Steel ☐ Carbon Steel ☐ Carbon Steel Box, ☐

Stainless Door


Cabinet includes lock with two keys. Hinged left side, piano type. For specifications on security cabinets, contact factory.





temperedwater.com

5330 East 25th St. Indianapolis, IN 46218 Phone (317) 261-1212 Fax (317) 261-1208

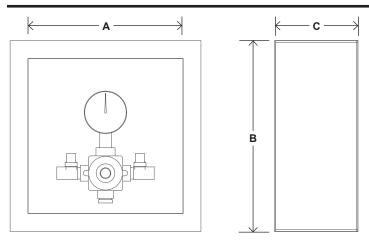

DIMENSIONS

Valve Number	Α	В	С	
310	14"	14"	6"	

Dimensions are for reference purposes only. For rough-in dimensions please refer to Lawler's Revit/BIM models found at temperedwater.com.

Inlets & Outlet are 1/2" NPT. Add 4" to height and for flange.

Model 310-CAB Eng. No. 86401

Typical Installation

Install the mixing valve below the hot water tank or heater. If this is not possible, pipe in a heat trap as shown in Figure 1 with an approximate 2' drop.

Connect a tempered water return line as shown in Figure 1. This allows flow through both ports of the mixing valve during periods of no draw.

Install an aquastat at the tempered water return pump.

Install the water heater per manufacturer's instructions.

Figure 1

